

SUPERCRANE™ **CITY** **CRANE**



- 13.0t
- 26.0m boom
- 31.0m with off set fly jib

- Rubber tracks
- Load moment indicator system

- Climatised enclosed cabin
- Main & auxilliary winch systems
- 3.9m minimum turning radius

Safety, performance and versatility are some of the best attributes of the Preston Hire City Class Crane's . Equipped with all-wheel steering designed for rough terrain and a modern, comfortable and air-conditioned operators cabin, this machine is designed for use in both in urban and rural settings.



COUNT ON US

1800 440 550 | prestonhire.com.au

SPECIFICATIONS SUPERCRANE™

CITY CRANE

DIMENSIONS

Length	7440mm
Width	1995mm
Height	2845mm
Weight	13765kg

CAPACITY


Max. capacity	13000kg at 1.7m
Max. working radius (main boom)	320kg at 22.5m
Max. working radius (fly jib)	260kg at 22.9m
Max. lifting height (main boom)	25.0m
Max. lifting height (fly jib)	30.0m

TRACK

Width	1995mm
-------	--------

MIN. TRANSPORT WIDTH

Overall Track	1995mm
Overall Unit	1995mm

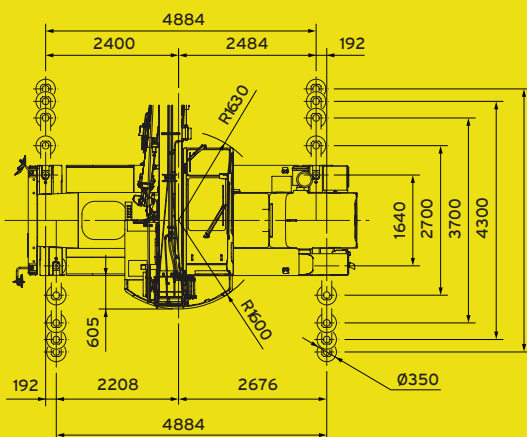

WORKING RANGE


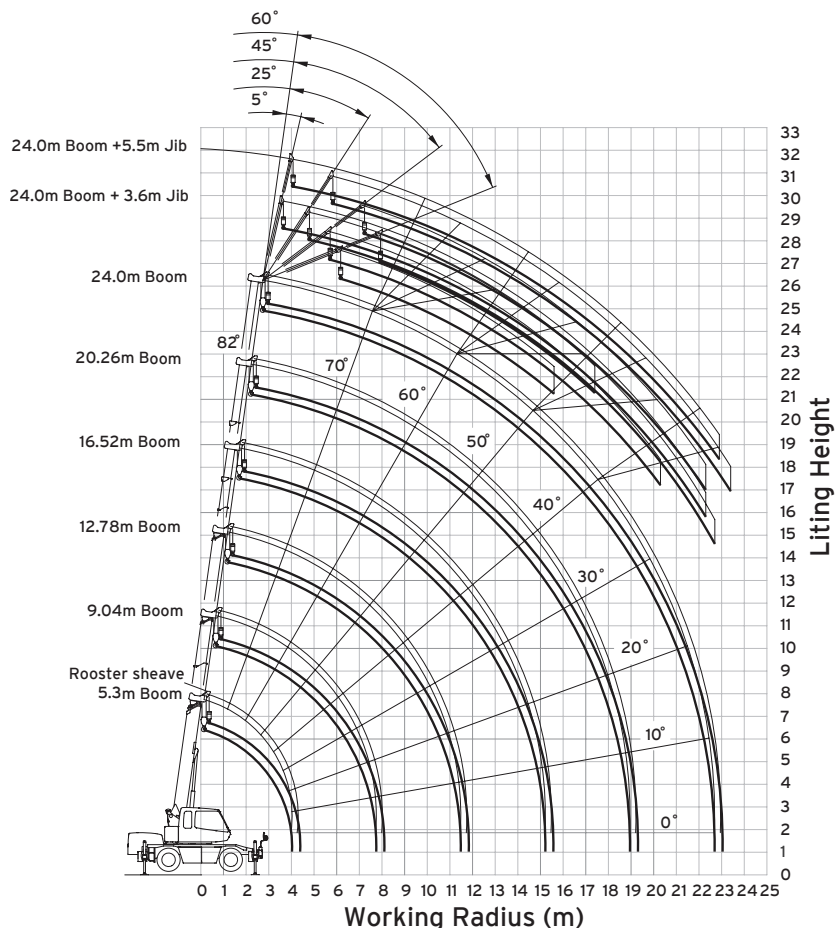


Diagram does not include deflection of boom and jib
The outriggers are fully extended (360° full range).

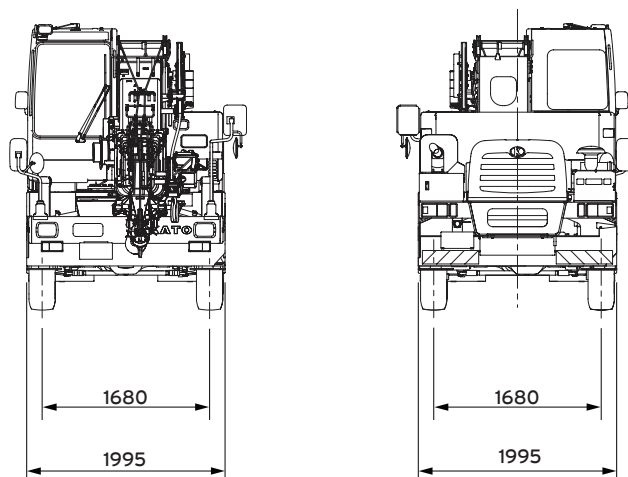

LOAD CHART SUPERCRANE™

CITY CRANE

LOAD CHART

TOTAL RATED LOAD - OUTRIGGERS AT MAXIMUM POSITION						
	5.3m Boom	9.04m Boom	12.78m Boom	16.52m Boom	20.26m Boom	24.0m Boom
Working Radius (m)	Total Rated Load (t)	Total Rated Load (t)	Total Rated Load (t)	Total Rated Load (t)	Total Rated Load (t)	Total Rated Load (t)
1.5	13.00	6.00	6.00			
1.7	13.00	6.00	6.00			
2.0	12.00	6.00	6.00	5.00		
2.5	10.00	6.00	6.00	5.00		
3.0	8.20	6.00	6.00	5.00	4.70	
3.5	7.00	6.00	6.00	5.00	4.70	3.20
4.0	6.10	6.00	6.00	5.00	4.70	3.20
4.5		5.50	5.40	5.00	4.50	3.20
5.0		5.00	4.90	4.60	4.05	3.20
5.5		4.50	4.40	4.20	3.70	3.20
6.0		4.10	4.00	3.80	3.40	3.00
6.5		3.70	3.65	3.50	3.15	2.80
7.0		3.35	3.30	3.20	2.90	2.60
8.0		2.70(7.7m)	2.90	2.70	2.50	2.25
9.0			2.25	2.30	2.20	1.95
10.0			1.80	2.05	1.95	1.75
11.0			1.45	1.70	1.75	1.55
12.0			1.35(11.4m)	1.40	1.50	1.40
13.0				1.15	1.30	1.25
14.0				0.95	1.10	1.15
15.0				0.80	0.90	1.00
16.0					0.79	0.85
17.0					0.68	0.74
18.0					0.58	0.64
19.0					0.51(18.8m)	0.55
20.0						0.47
21.0						0.41
22.0						0.35
22.5						0.32

The total rated load charts are based on the actual working radius including boom deflection.



COUNT ON US

1800 440 550 | prestonhire.com.au



SPECIALISED EQUIPMENT HIRE SOLUTIONS

Service Facility Locations

Preston Hire - NSW

Unit 3,10 Tarlington Place,
Smithfield, NSW 2164
nswsales@prestonhire.com.au

Preston Hire - ACT

38 John Bull Street,
Queanbeyan West, NSW 2620
actsales@prestonhire.com.au

Preston Hire - New Zealand

563 Rosebank Rd,
Avondale, Auckland 1026
nzsales@prestonhire.com.au

Preston Hire - QLD

83 Parramatta Road,
Underwood, QLD 4119
qldsales@prestonhire.com.au

Preston Hire - VIC/TAS

38-40 Sunline Dr,
Truganina, VIC 3029
vicsales@prestonhire.com.au

Preston Hire - WA/NT

Unit 2,8 Hunt Street,
Malaga, WA 6090
wasales@prestonhire.com.au

Preston Hire - SA

102 Cormack Road,
Wingfield, SA 5013
sasales@prestonhire.com.au

**Preston Hire available across Oceania*



COUNT ON US

1800 440 550 | prestonhire.com.au